


Mat. - Nr. - Konstante
3740


Gebrauchs-/
Aufstellenweisung
52 9445
(en)
52 9446
(es)
52 9455
(fr)

Programmtabelle
52 9456
(en)
52 9457
(es)
52 9458
(fr)

1) 36 6766
(en)


Mat. - Nr. - Konstante
3740

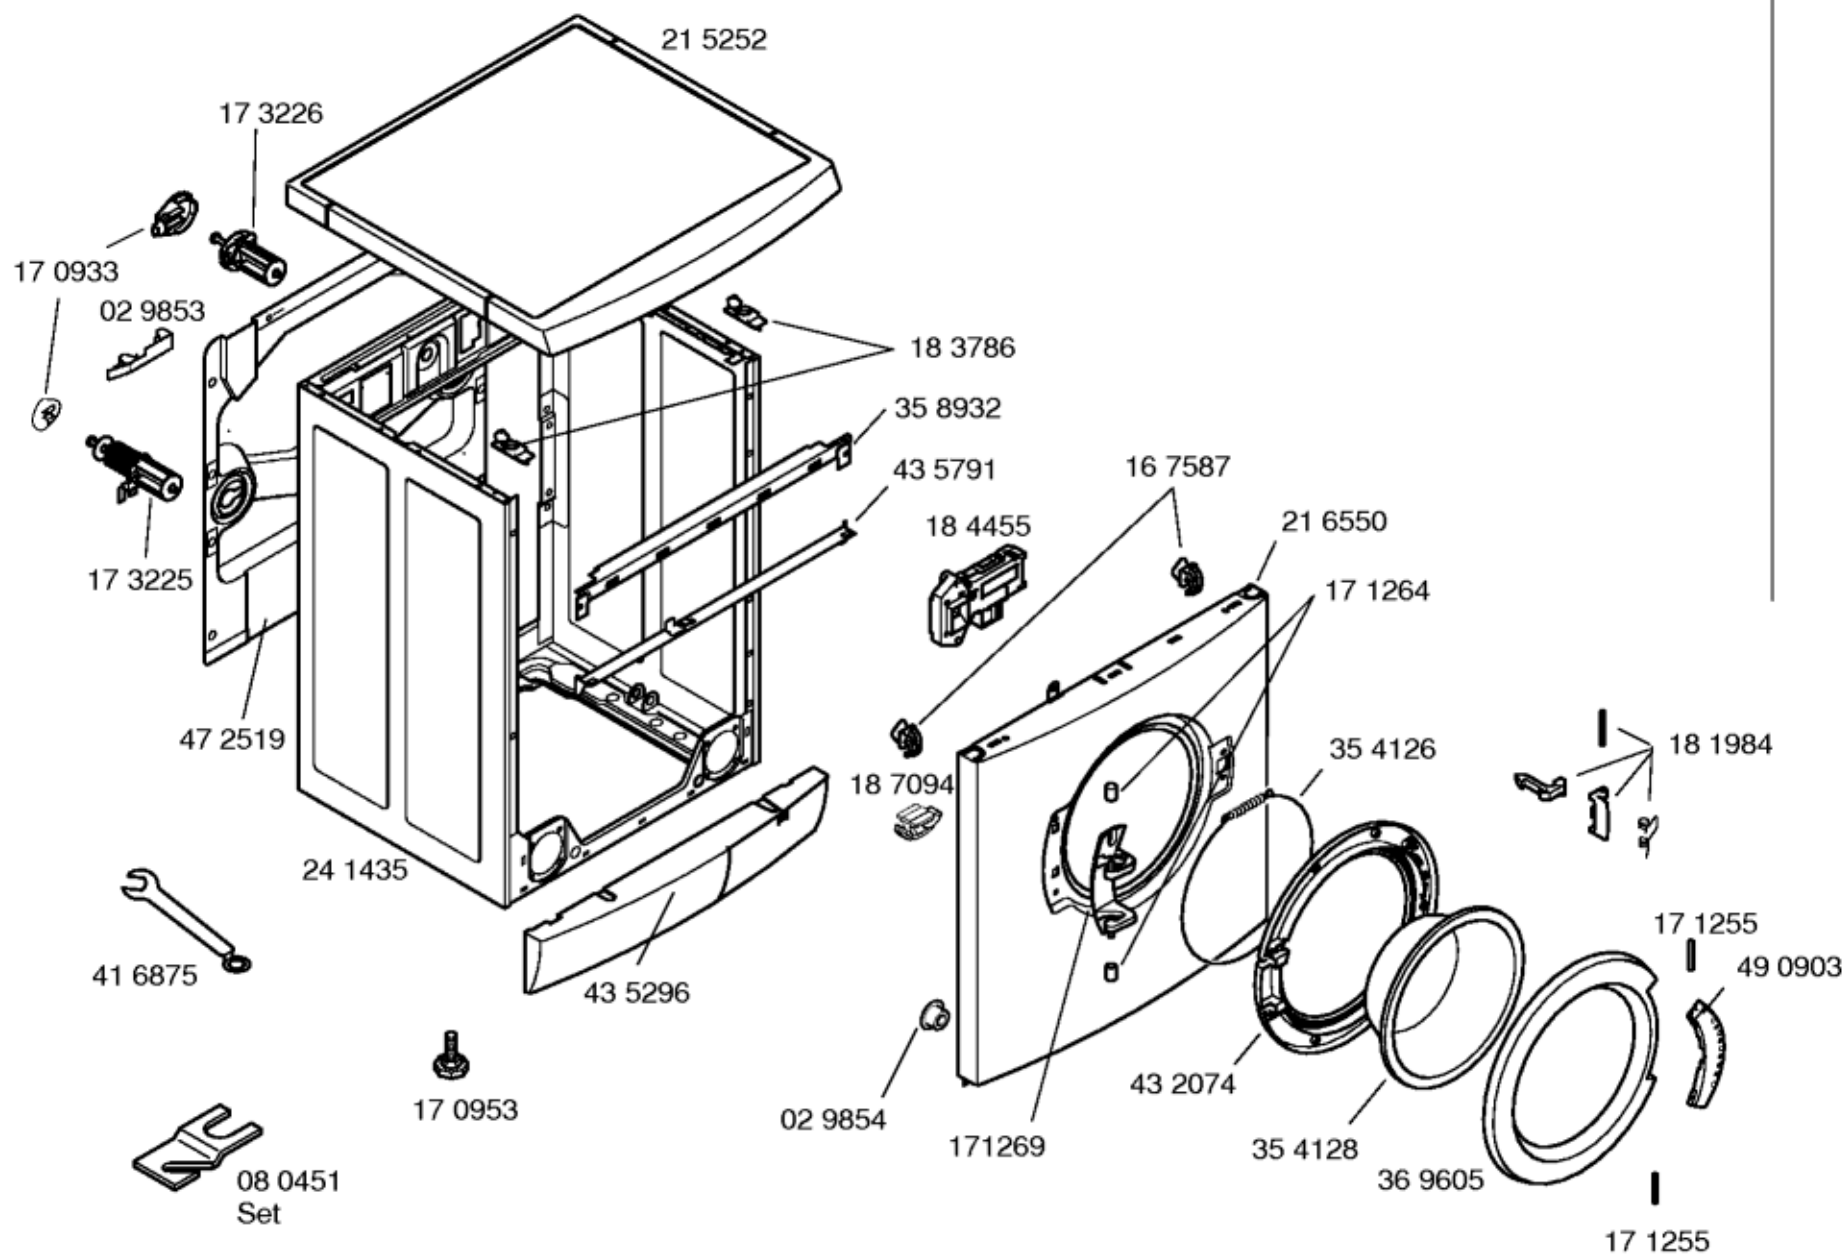

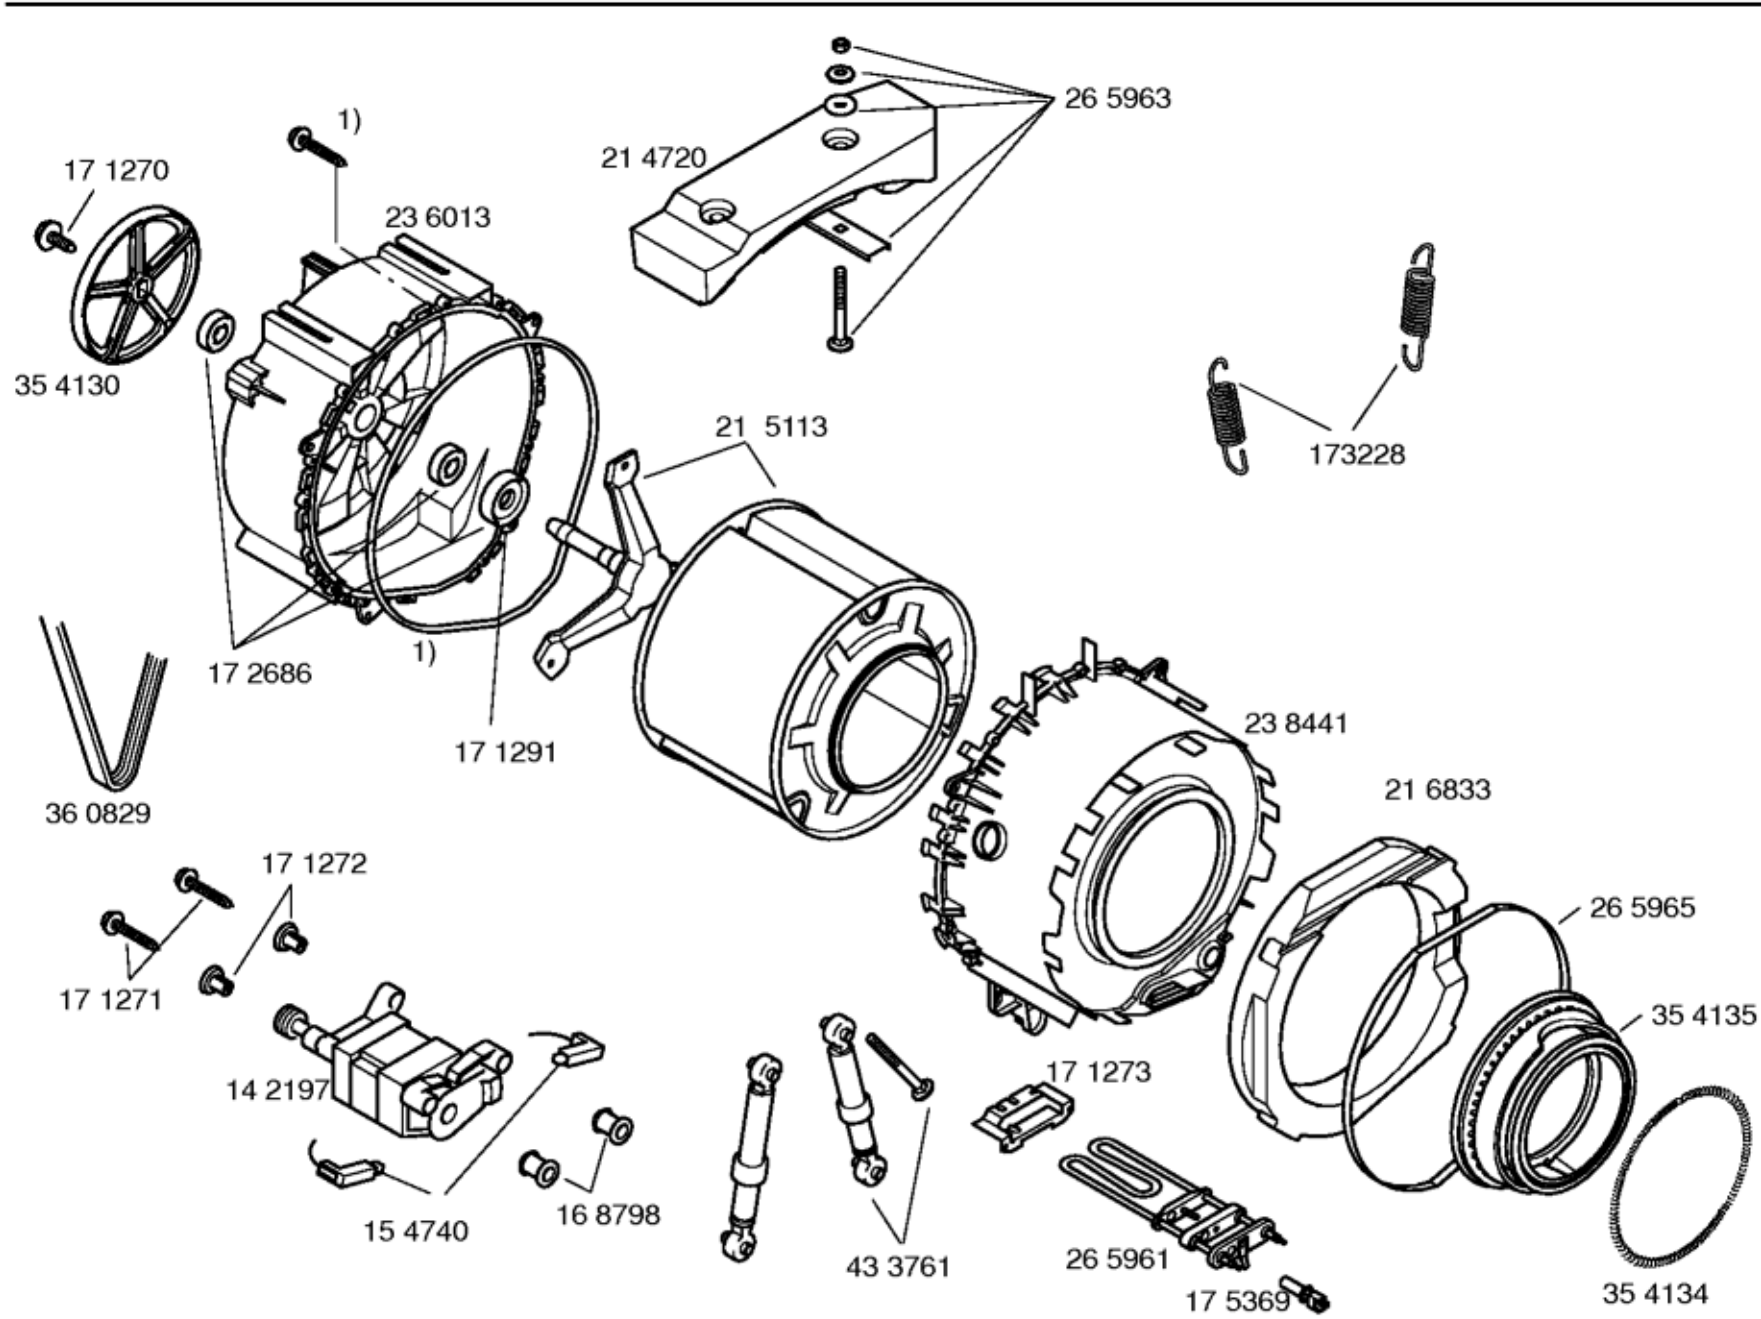

Mat. - Nr. - Konstante
3740

1) 41 6886

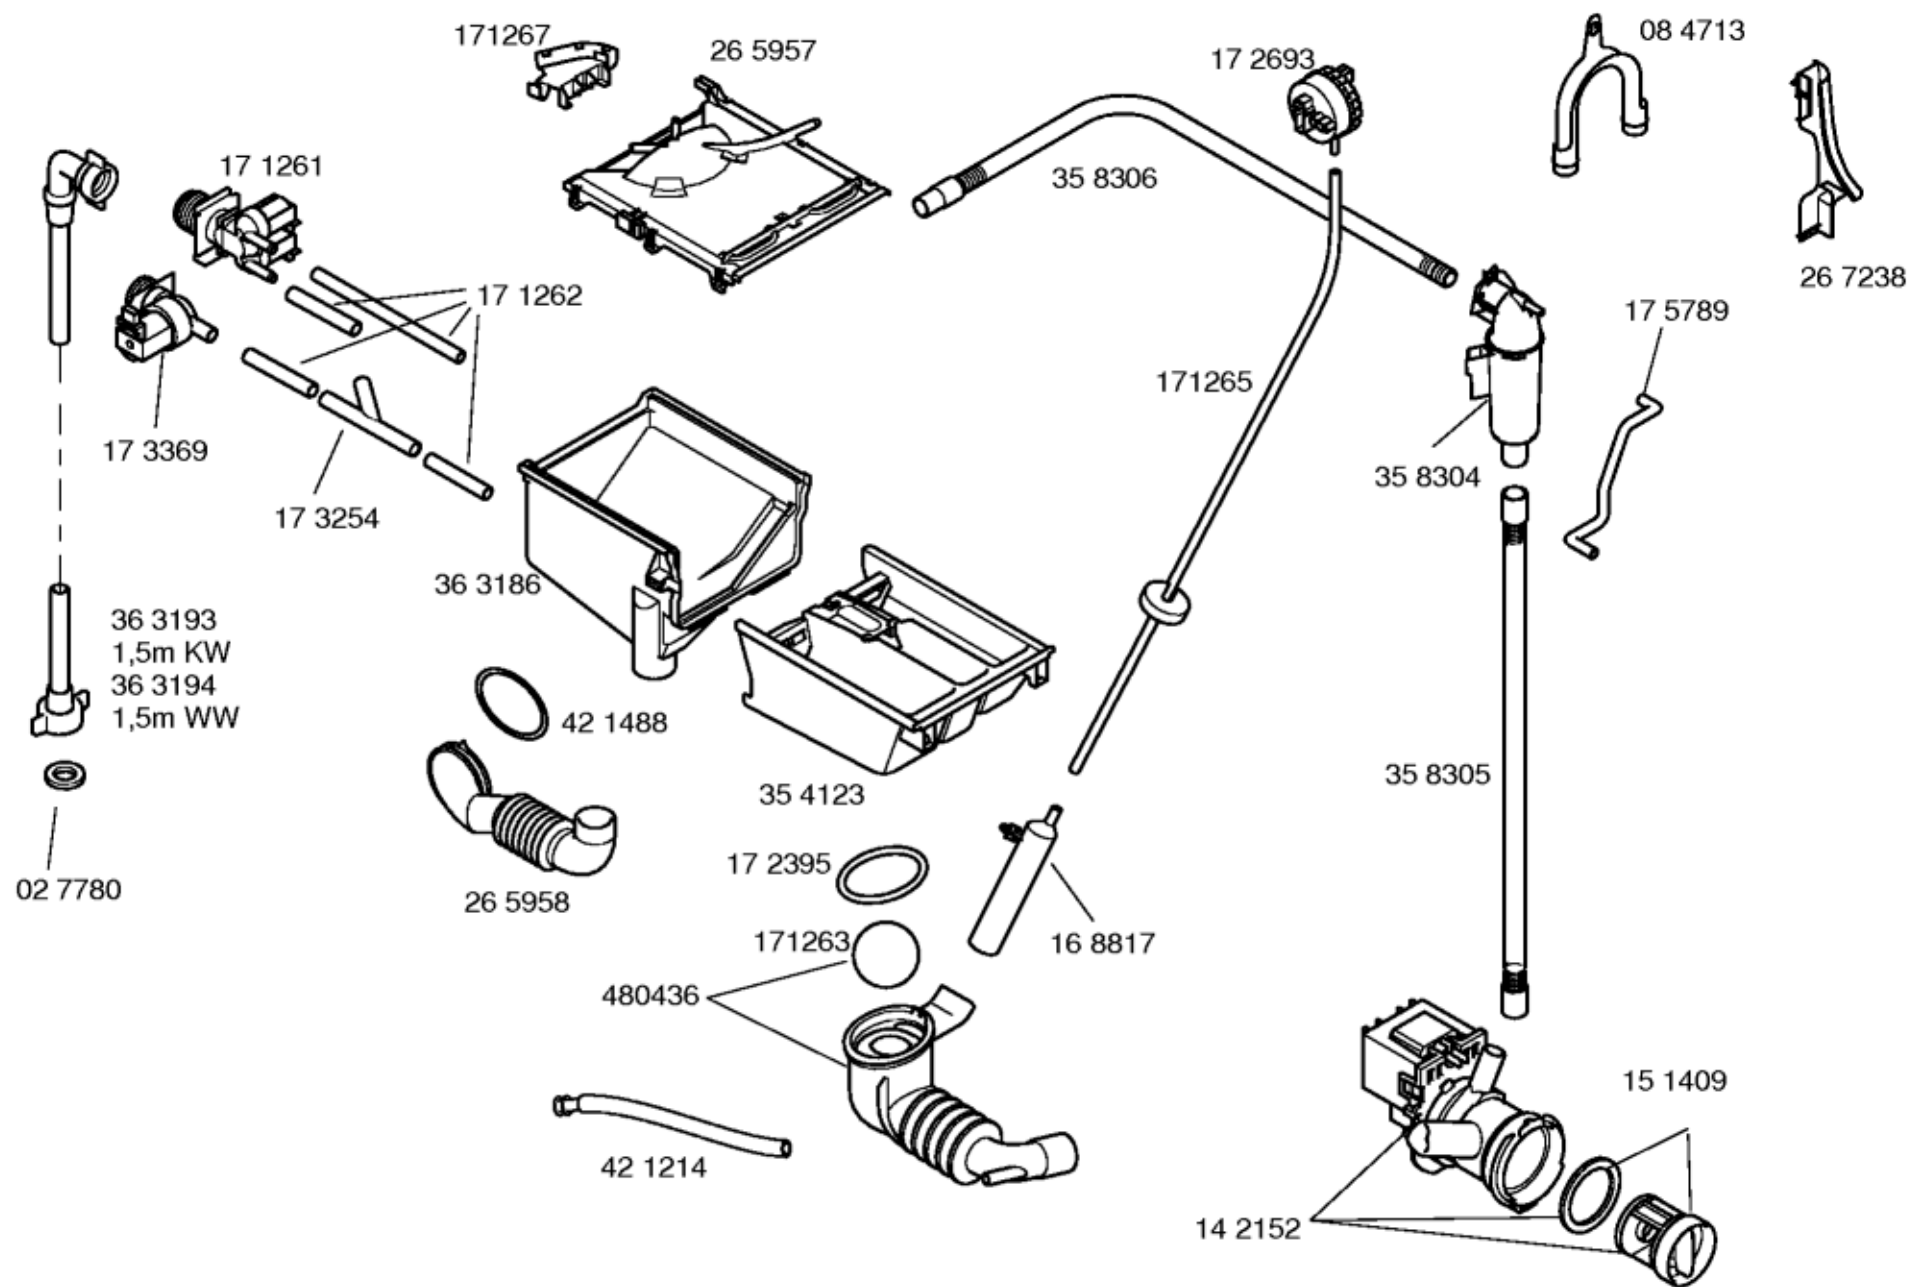

Position ID	Spare part no.	Replacement	Description
0100	00529445		Operating/installations instructions
0106	00181928	00623842	Capacitor-interference suppre.
0110	00481304		Control module
0114	00172697		Coupling
0116	00172699		Knob-programme
0118	00172698		Coupling
0120	00172700		Knob-RPM
0200	00173226		Transit bolt
0202	00173225		Transit bolt
0204	00170933		Cover
0206	00029853		Holder
0208	00472519	00474870	Case-rear part
0210	00241435	00247508	Housing
0212	00435791		Rail
0213	00358932		Rail
0214	00215252		Worktop
0216	00183786		Holder
0220	00669408		Panel-base
0226	00167587	00067083	Holder
0227	00187094		Distance holder
0228	00029854	00606923	Holder
0230	00216550	00235567	Front panel
0232	00171264		Bushing
0234	00171269		Hinge-window
0236	00354126	00439671	fastening ring
0238	00432074		Frame-window

0240	00354128	11020392	Window
0242	00369605		Frame-window
0244	00490903		Handle
0246	00171255		Axis
0247	00181984	00634207	Latch
0248	00080451	00493529	Floor Securing Component
0250	00416875		Auxiliary tool
0302	00173228	00642529	Spring-tank
0304	00265963		Fixing kit
0306	00214720		Weight
0308	00171270		Screw
0310	00354130	11002942	Pulley
0312	00354131	00678914	Belt-drive
0314	00236013		Tub
0315	00172686		Bearing set
0316	00416886		Sealing
0317	00171291	00613082	Shaft seal
0322	00215113	00773699	Drum
0324	00238441	00715100	Tub
0326	00216833	00773470	Weight
0328	00265965		Band
0330	00354135		Boot gasket
0332	00354134		fastening ring
0334	00171273		Holder
0336	00265961		Heating element
0338	00175369		Sensor-NTC
0340	00433761	00448032	Shock absorber
0342	00171271		Screw
0344	00171272		Fixture

0346	00168798		Holder
0348	00142197		Motor
0350	00154740		Carbon-brush
0402	00027780		Filter-water inlet
0404	00171267		Holder
0406	00171261	00428210	Valve-magnet
0407	00173369	00428212	Valve-magnet
0408	00171262		Hose-valve/soap box
0409	00173254		Connection piece
0412	00265957		Dispenser tray-upper part
0416	00354123		Dispenser tray
0418	00265958		Hose-fill
0420	00480436		Eco-hose-sump
0422	00171263		Ball-sump
0423	00421214		Drain hose
0424	00168817	00424981	Pressure chamber
0428	00171265	00491919	Hose-pressure chamber
0430	00172693	00600925	Regulator-water level
0434	00421488		fastening ring
0436	00172395	00603523	fastening ring
0438	00358306		Outlet hose
0440	00142152	00144486	Pump-drain
0448	00151409		Filter-fluff
0450	00084713	00655300	Holder
0451	00358304		Container return
0452	00358305		Hose
0454	00175789		Hose-vent
0456	00267238		Holder