


Mat. - Nr. - Konstante  
3740 . . . . .


Gebrauchsanweisung  
58 5488  
(EN)

Programmtabelle  
58 5489  
(EN)

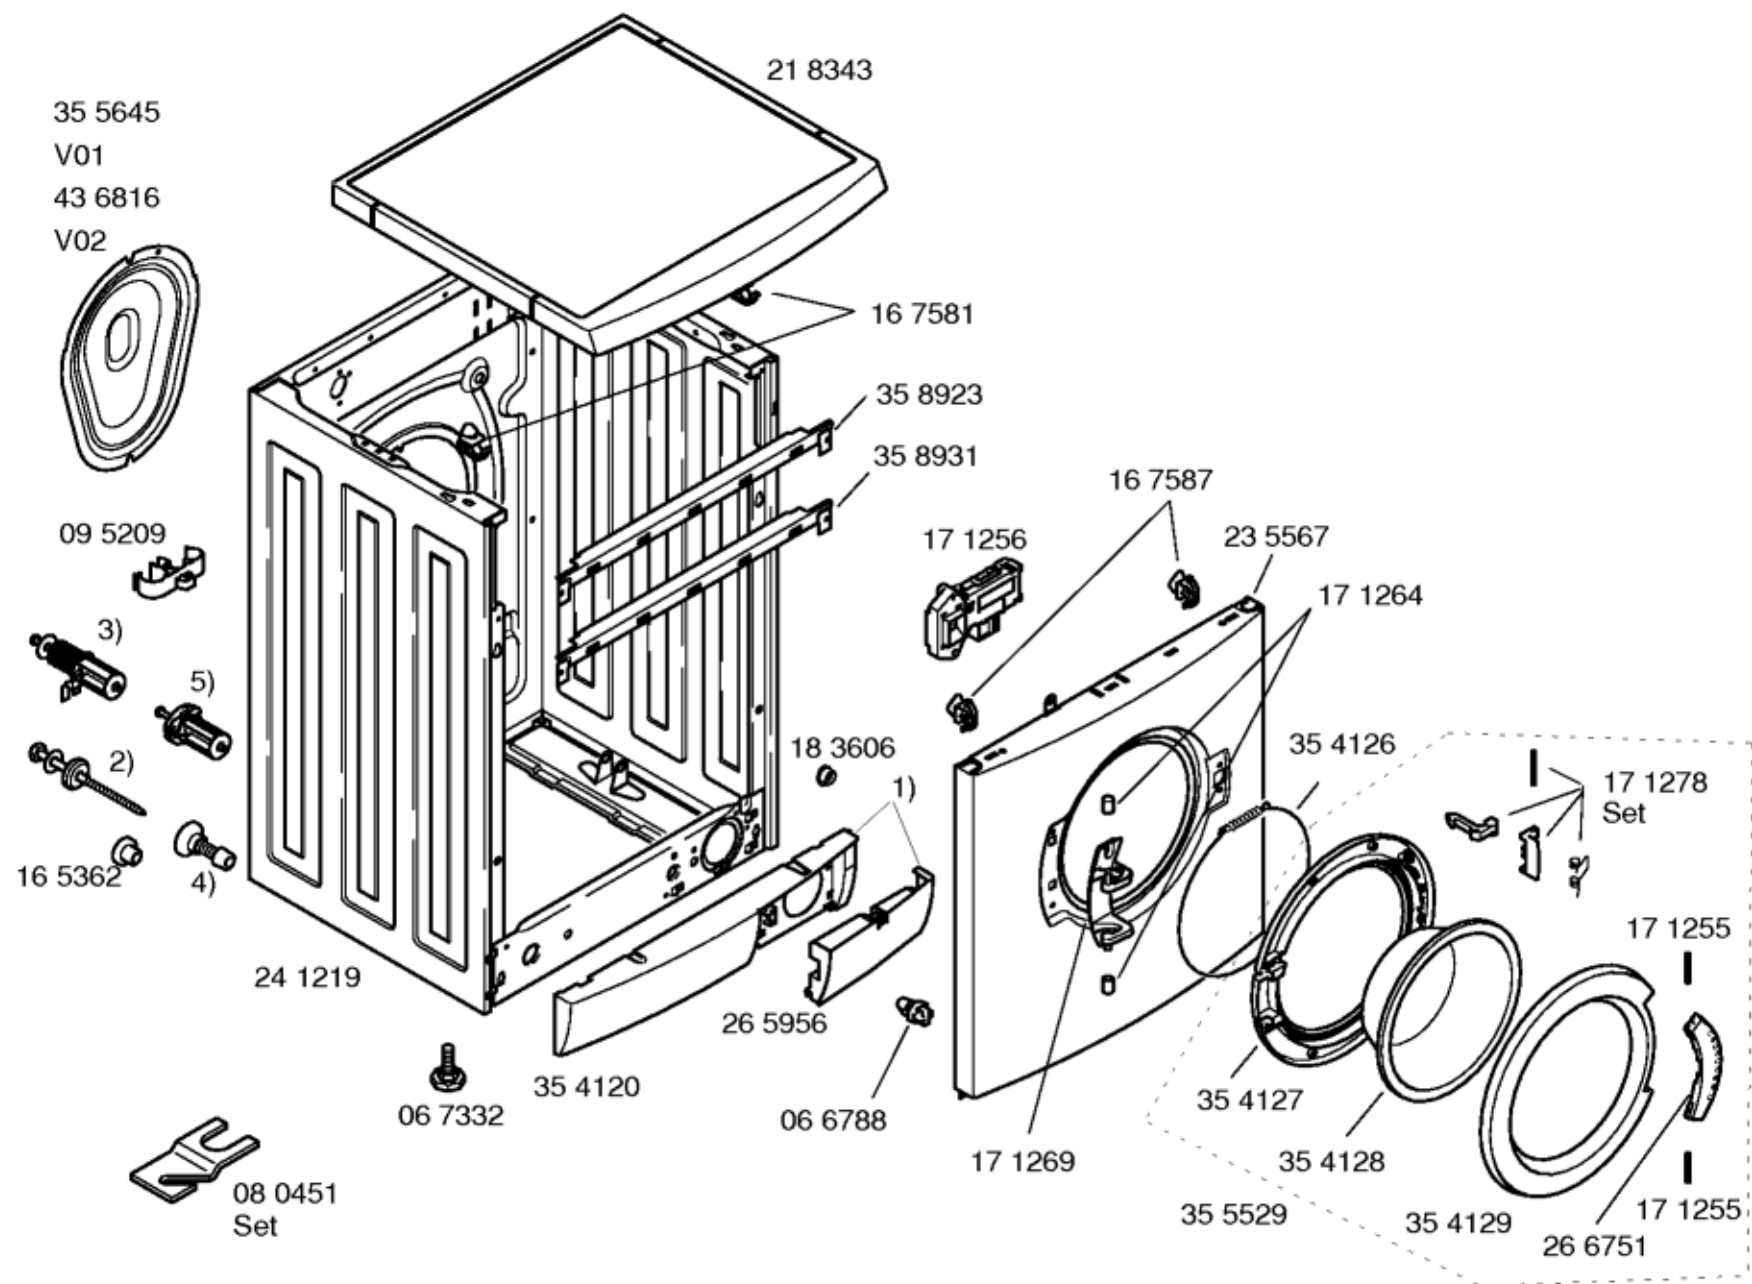

Mat. - Nr. - Konstante  
3740 . . . . .


- 1) 35 5528
- 2) 16 8813  
V01
- 3) 18 6869  
V02
- 4) 16 8814  
V01
- 5) 18 6870  
V02

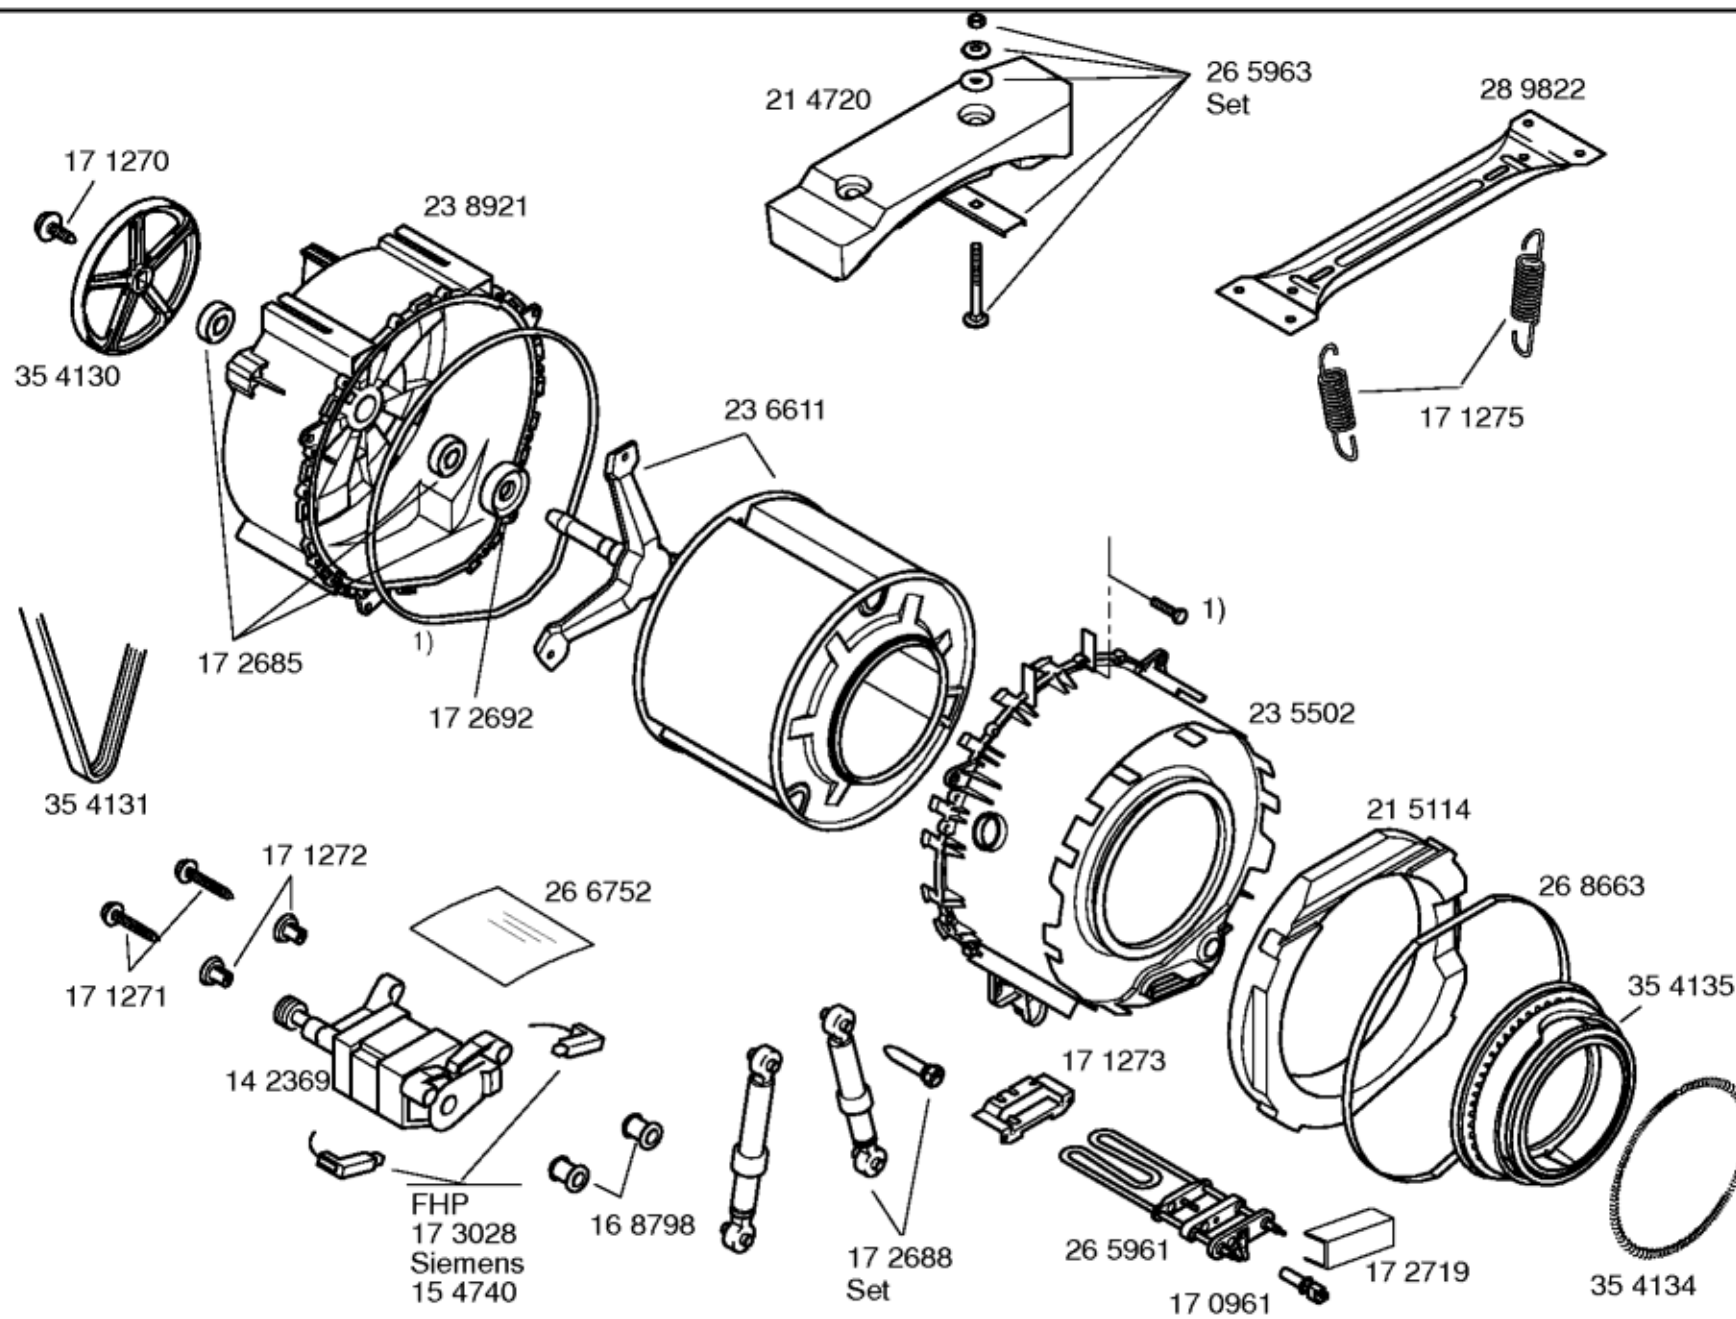

Mat. - Nr. - Konstante  
3740 . . . . .

1) 26 5964  
Set

Mat. - Nr. - Konstante  
3740 . . . . .

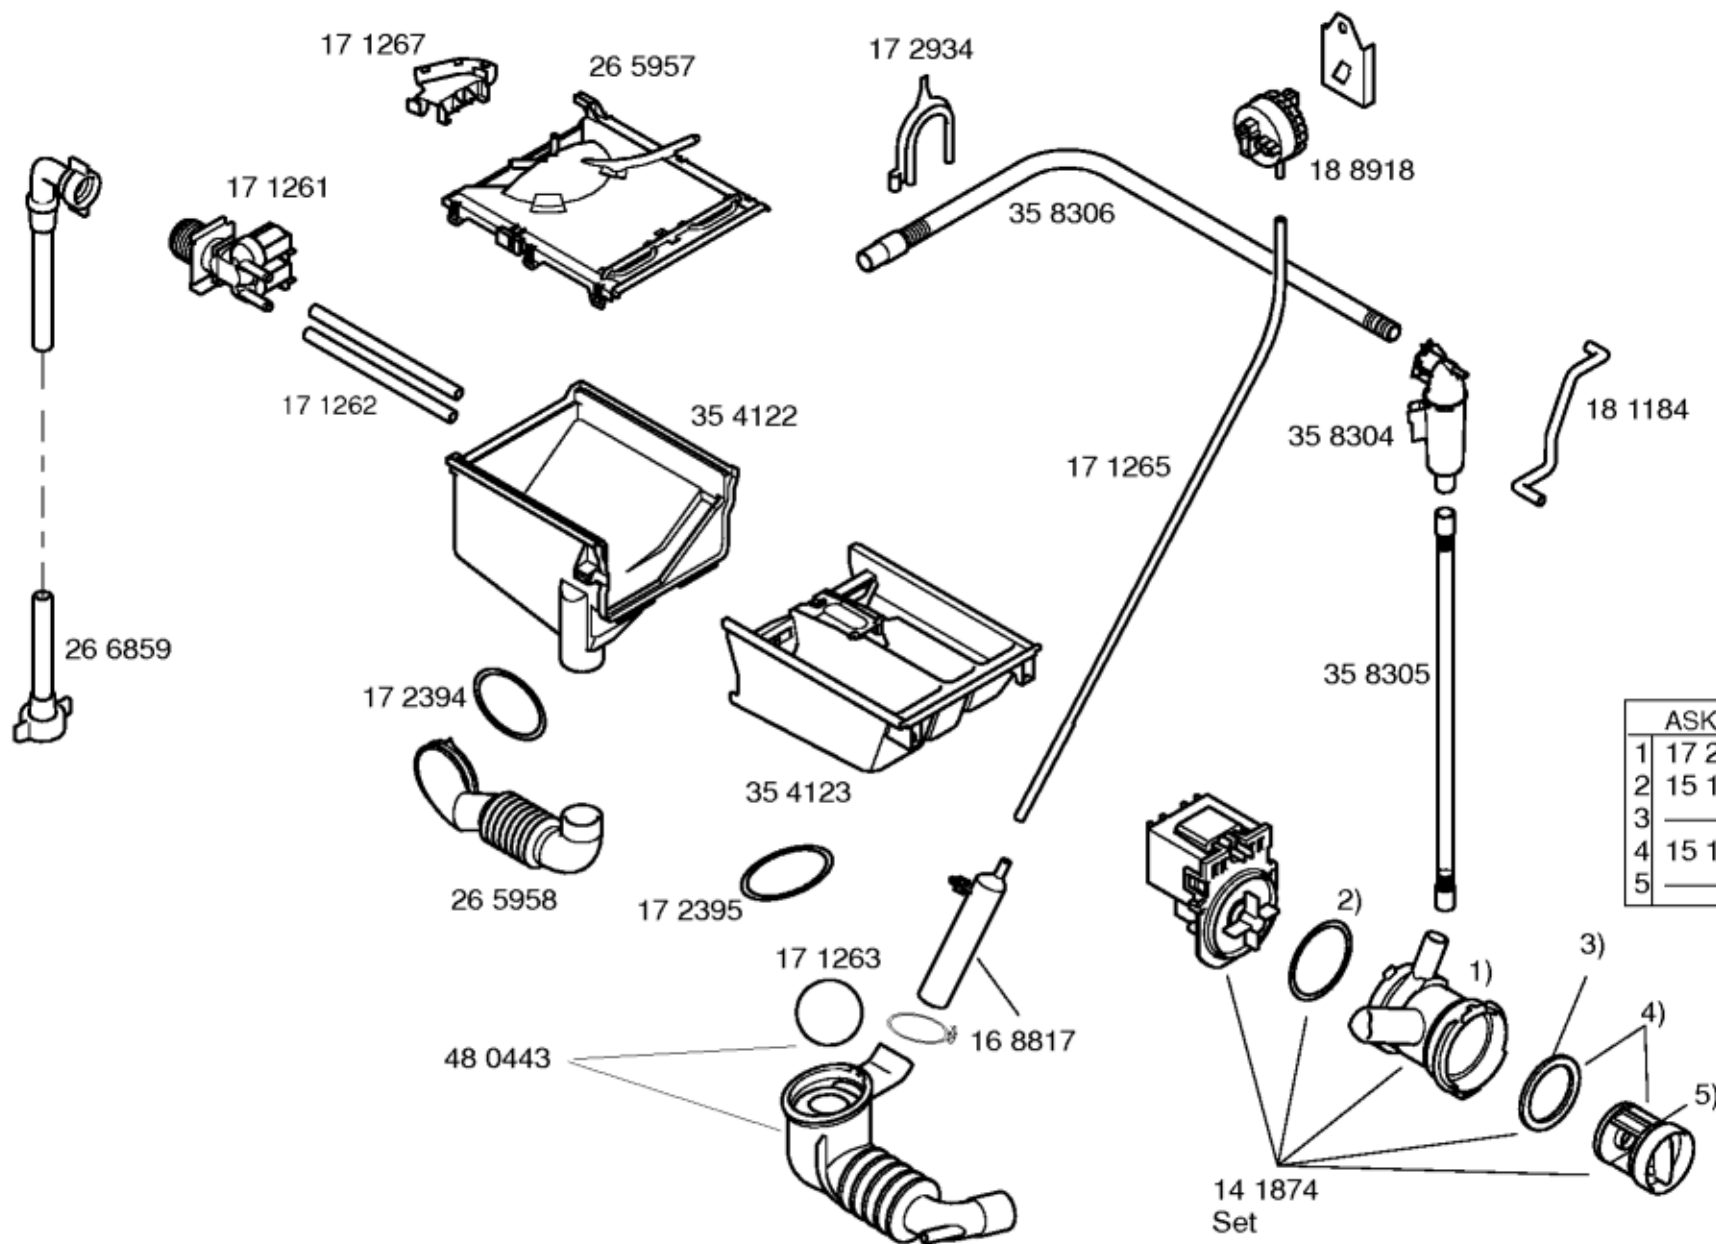

	ASKOLL	COPRECI
1	17 2340	17 2337
2	15 1408	15 4358
3	_____	172338
4	15 1409	_____
5	_____	17 2339

<b>Position ID</b>	<b>Spare part no.</b>	<b>Replacement</b>	<b>Description</b>
0001	00067332	00621463	Foot
0002	00084713	00655300	Holder
0003	00095209		Holder
0004	00141874	00145787	Pump-drain
0005	00142369	00145563	Motor
0007	00165362		Cover
0008	00167581		Holder
0009	00167587	00067083	Holder
0010	00186869	00429205	Transit bolt
0011	00186870		Transit bolt
0012	00170961		Sensor-NTC
0013	00171254	00623842	Capacitor-interference suppre.
0014	00171256	00182154	Electric lock
0015	00171261	00428210	Valve-magnet
0016	00171262		Hose-valve/soap box
0017	00171265	00491919	Hose-pressure chamber
0018	00171267		Holder
0019	00171270		Screw
0020	00171271		Screw
0021	00171272		Fixture
0022	00171273		Holder
0023	00171275	00606818	Spring-tank
0024	00172394	00421488	fastening ring
0025	00172395	00603523	fastening ring
0027	00214720		Weight
0028	00215114	00475501	Weight
0029	00218343		Worktop

0030	00235502	00241627	Tub
0032	00235567		Front panel
0033	00236611	00215117	Drum
0034	00238921		Tub at rear
0035	00265958		Hose-fill
0036	00265961		Heating element
0037	00266752		Cover
0038	00266859	12013467	Hose-inlet
0039	00268663		Clamp
0040	00289822		Support
0041	00354126	00439671	fastening ring
0042	00354130	11002942	Pulley
0043	00354131	00678914	Belt-drive
0044	00354134		fastening ring
0045	00354135		Boot gasket
0047	00355529		Window
0048	00436816		Case-rear part
0049	00358304		Container return
0050	00358305		Hose
0051	00358306		Outlet hose
0052	00358923		Rail
0053	00358931	00435791	Rail
0054	00480443		Eco-hose-sump
0056	00266748	00267678	Tray handle-dispenser
0057	00488255	00432218	Control module
0058	00266748	00267678	Tray handle-dispenser
0062	00172699		Knob-programme
0063	00181184		Hose-vent
0064	00354122		Dispenser tray-lower part

0065	00354123		Dispenser tray
0066	00188918	00427040	Regulator-water level