 
 


Position ID	Spare part no.	Replacement	Description
0101	00266722	00481580	Power cord
0102	00173833		Capacitor-interference
0103	00173487		Control unit
0104	00067032		Regulator-temperature
0105	00067362		Switch
0106	00152160		Switch
0107	00067362		Switch
0108	00067364		Switch
0109	00180703		Lamp-control
0110	00188909		Cable harness
0111	00173541	00188590	Sealing
0116	00184265		Knob-programme
0117	00181431		Knob-temperature
0118	00181432		Push button set
8000	00472560		Built-under kit
8401	00587684		Instruction manual

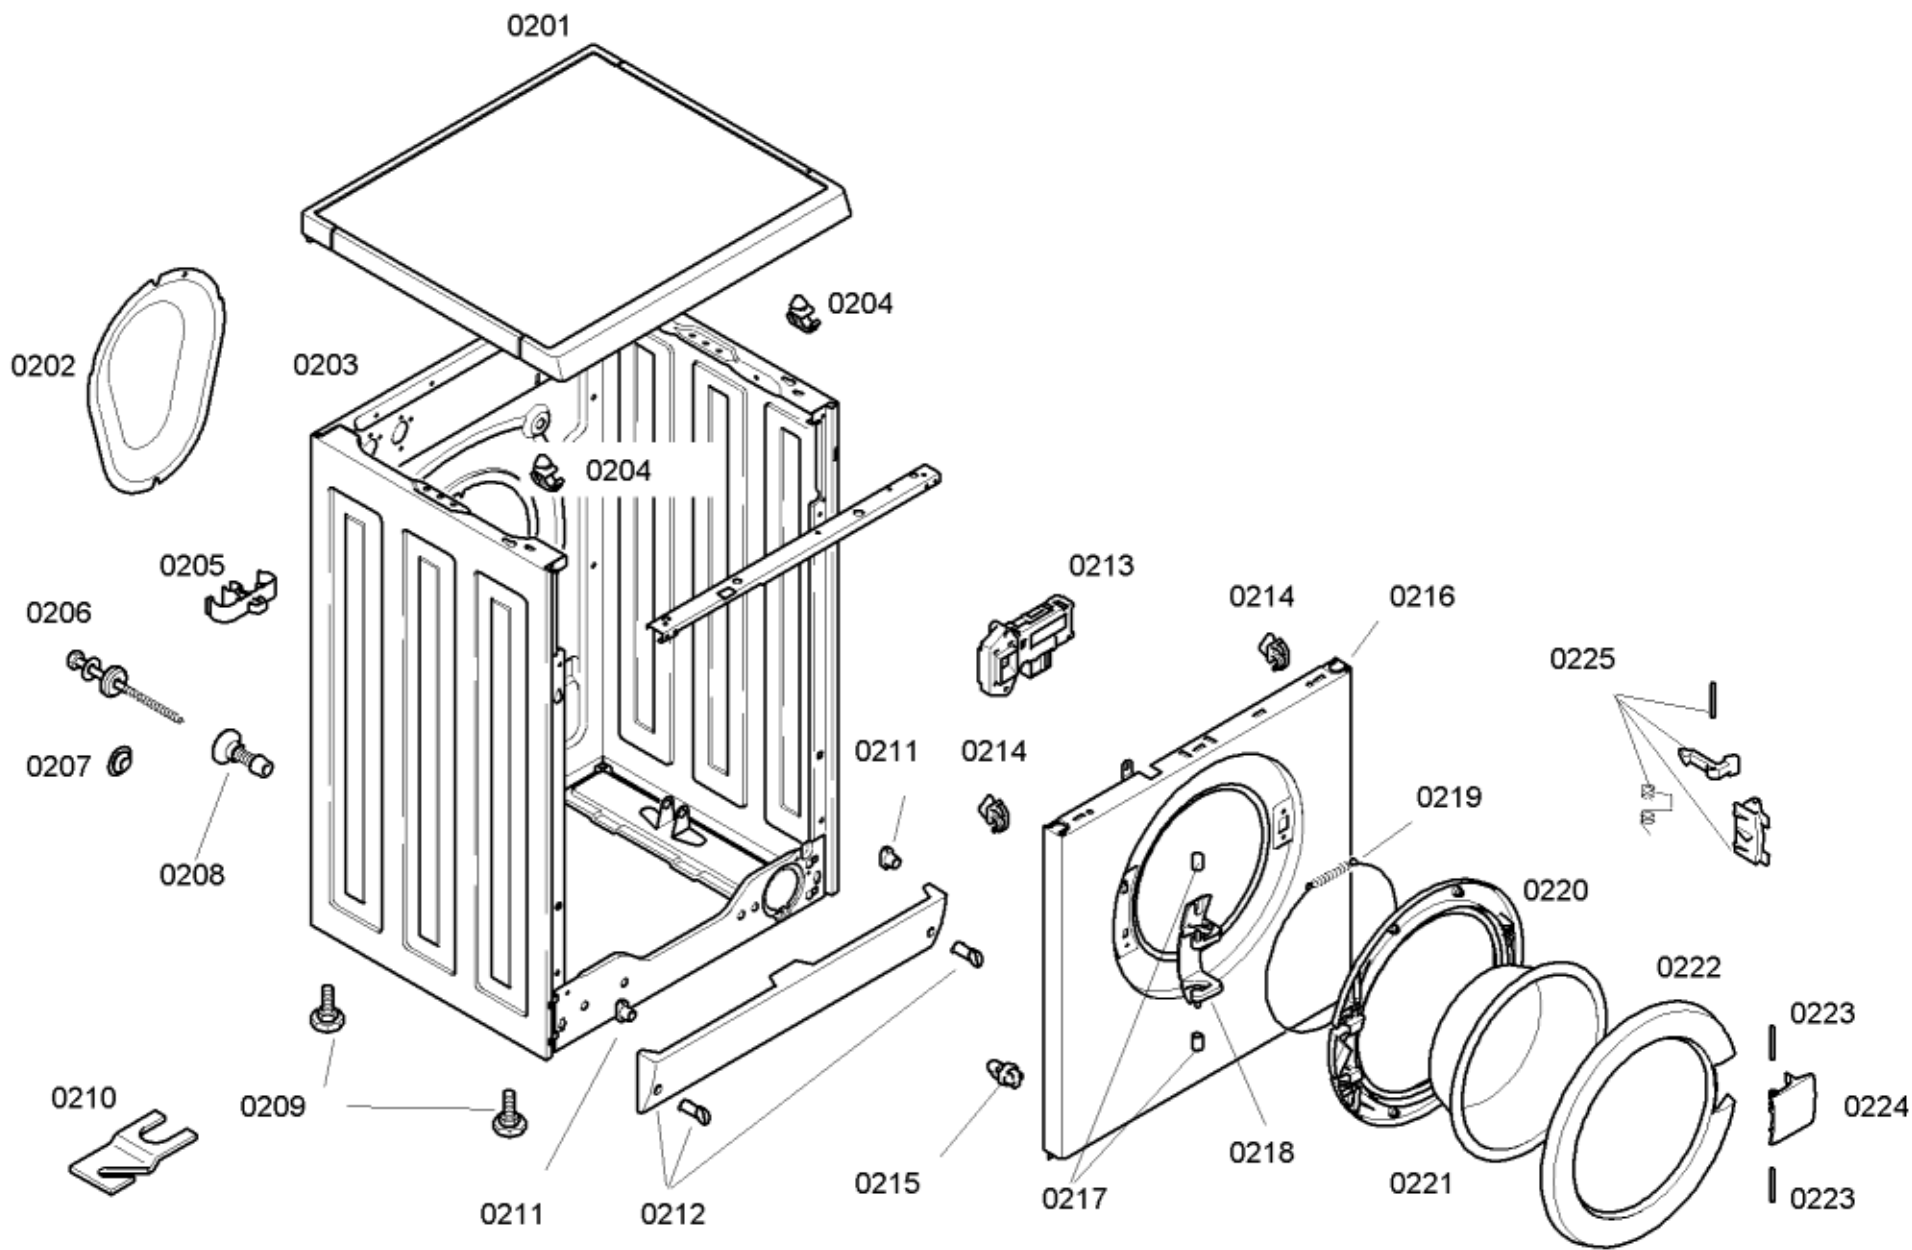 


Position ID	Spare part no.	Replacement	Description
0201	00218342		Worktop
0202	00285435		Case-rear part
0203	00235129		Housing
0204	00167581		Holder
0205	00095209		Holder
0206	00168813		Transit bolt
0207	00165362		Cover
0208	00168814	00600388	Distance holder
0209	00067332	00621463	Foot
0210	00080451	00493529	Floor Securing Component
0211	00183606	00606923	Holder
0212	00362252		Panel-base
0213	00421470		Electric lock
0214	00167587	00067083	Holder
0215	00066788		Holder
0216	00217228		Front panel
0217	00171264		Bushing
0218	00171269		Hinge-window
0219	00354126	00439671	fastening ring
0220	00362253		Frame-window
0221	00354128	11020392	Window
0222	00362257	00665992	Frame-decor
0223	00171255		Axis
0224	00183607		Handle
0225	00183608		Latch
8000	00472560		Built-under kit
8401	00587684		Instruction manual

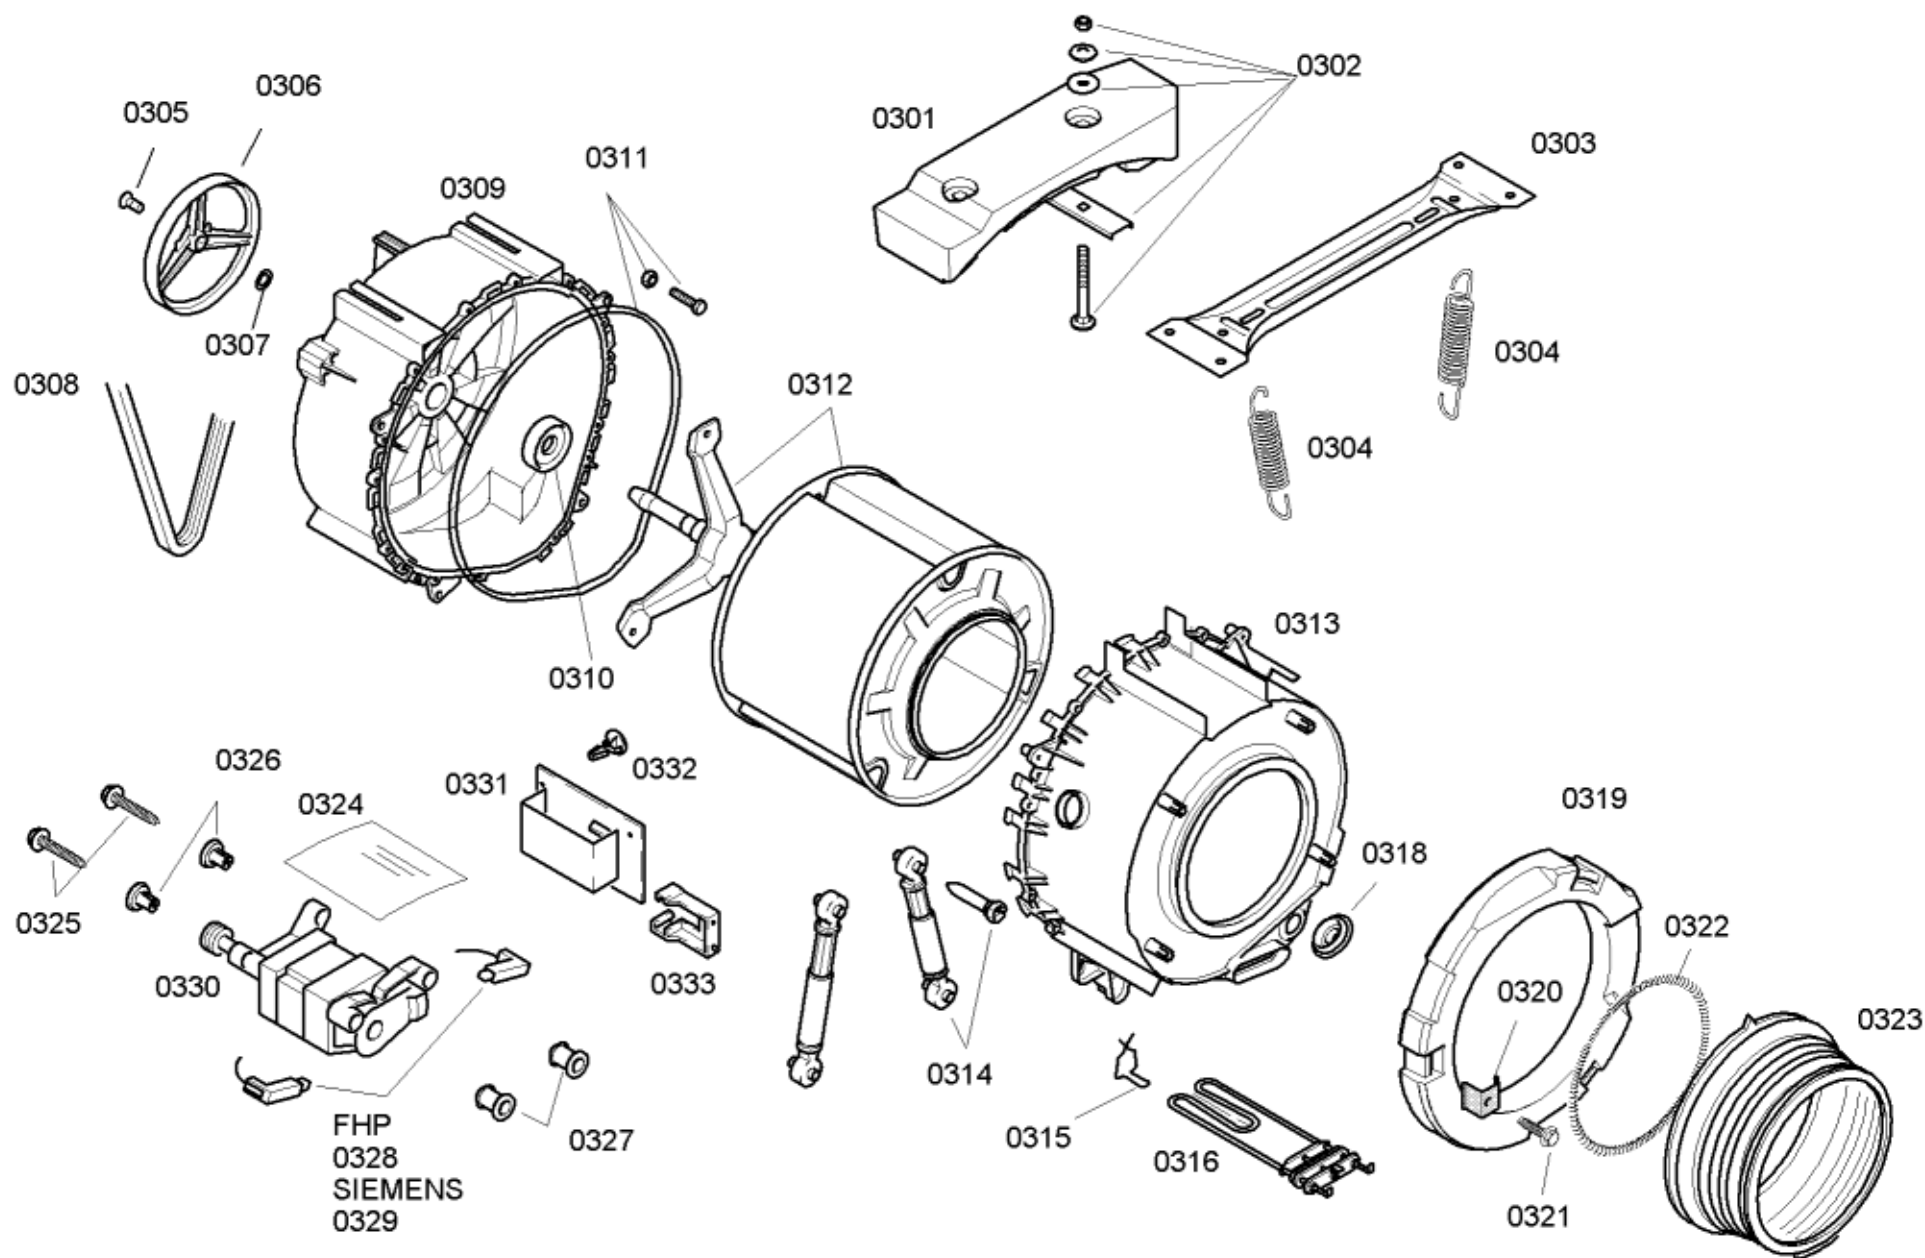

Position ID	Spare part no.	Replacement	Description
0301	00214720		Weight
0302	00265963		Fixing kit
0303	00289822		Support
0304	00069605		Spring
0305	00067716		Screw
0306	00093390		Pulley
0307	00417477		Washer
0308	00264987		Belt-drive
0309	00475046		Tub
0310	00428662		Shaft seal
0311	00264574		Repair-set
0312	00475041	00234681	Drum
0313	00217424		Tub
0314	00433761	00448032	Shock absorber
0315	00168794		Fixture
0316	00264576		Heating element
0318	00039132		Sealing
0319	00217422		Weight
0320	00184285		Holder
0321	00171271		Screw
0322	00354135		Boot gasket
0323	00354135		Boot gasket
0324	00266752		Cover
0325	00264572		Screw
0326	00171272		Fixture
0327	00168798		Holder
0328	00173028		Carbon-brush

0329	00154740		Carbon-brush
0330	00144003		Motor
0332	00067055		Holder
0333	00151531		Holder
8000	00472560		Built-under kit
8401	00587684		Instruction manual

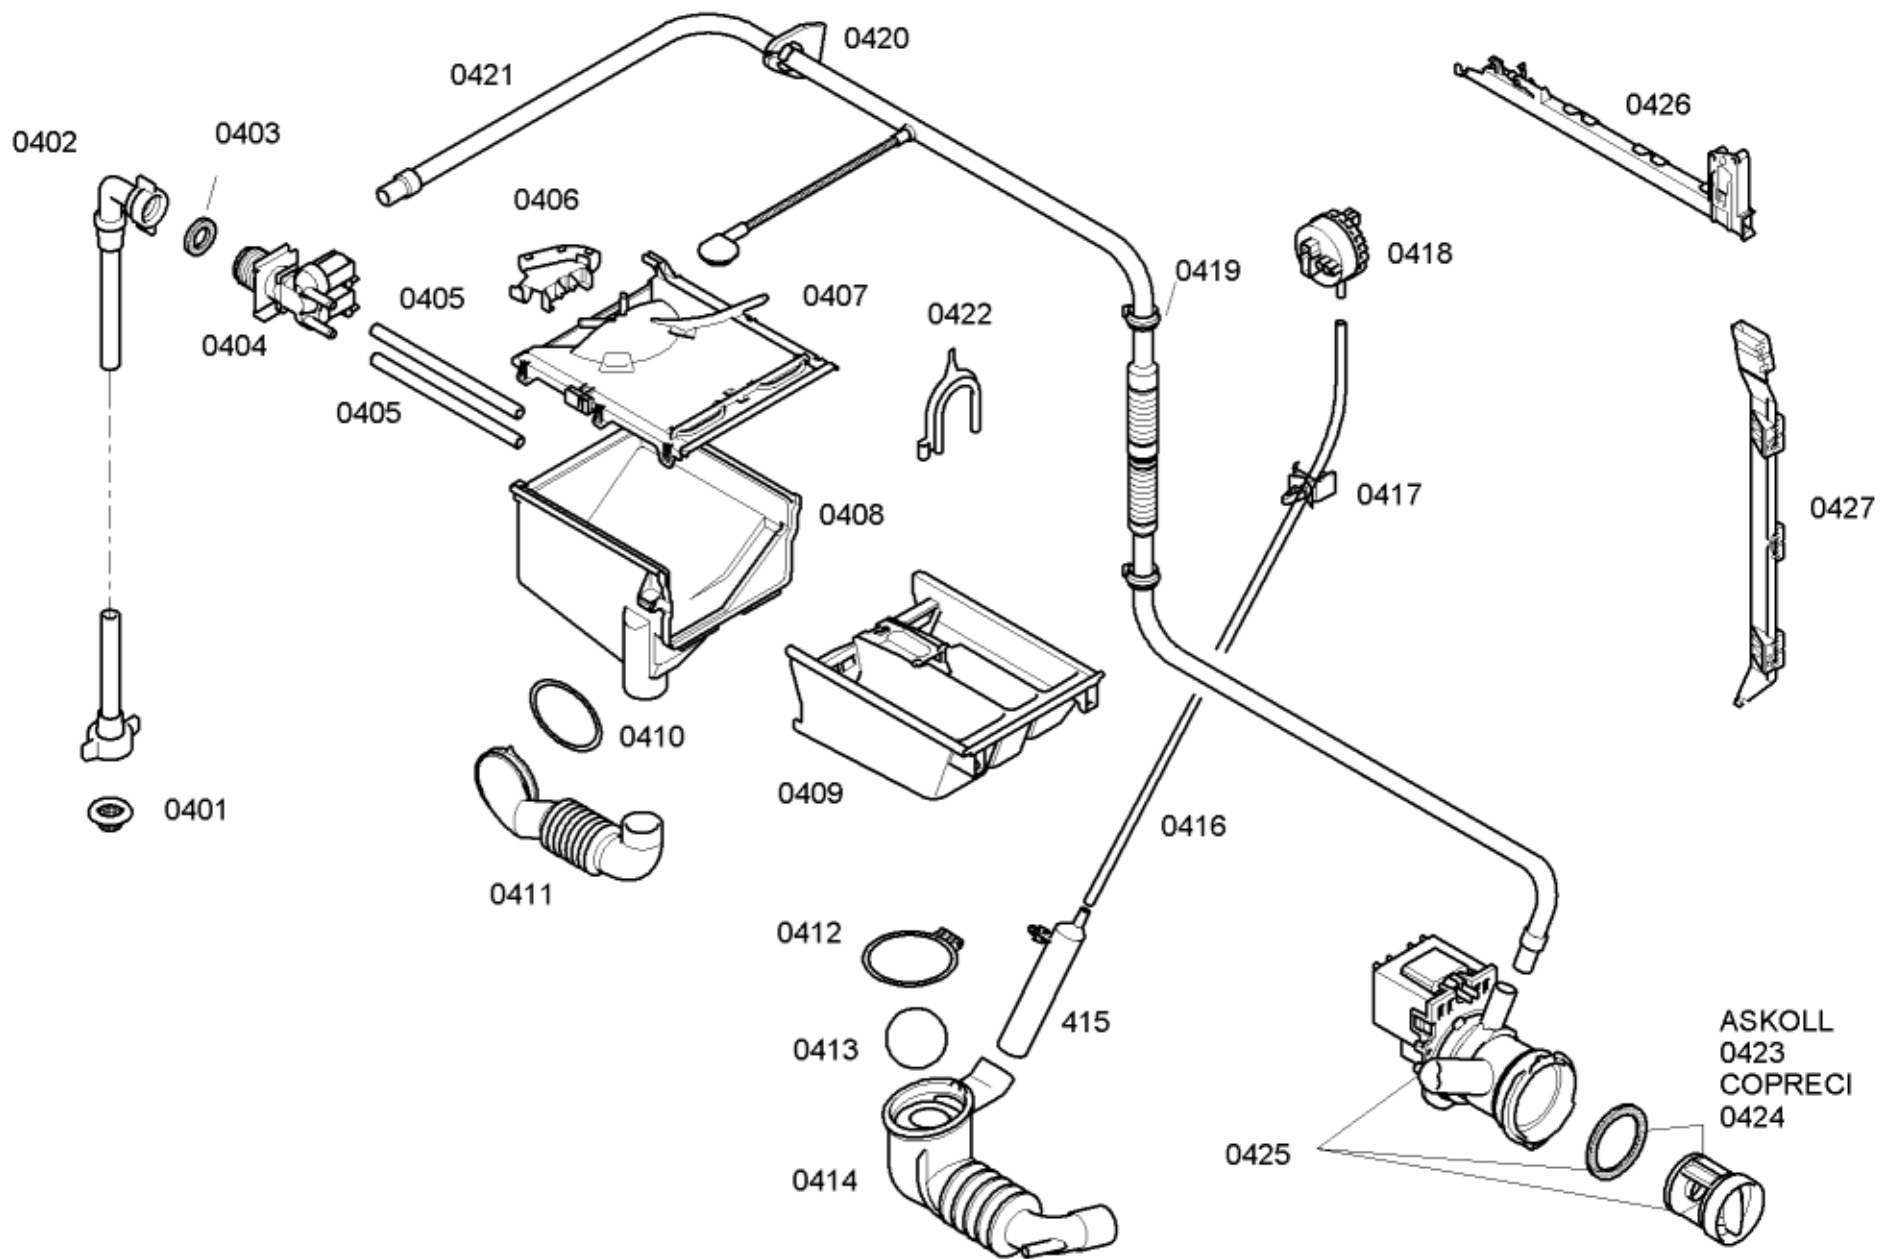

Position ID	Spare part no.	Replacement	Description
0401	00034887	00027780	Filter-water inlet
0402	00460484	00700836	Hose-inlet
0403	00066627		Sealing
0404	00171261	00428210	Valve-magnet
0405	00171262		Hose-valve/soap box
0406	00171267		Holder
0407	00481670		Dispenser tray-upper part
0408	00354122		Dispenser tray-lower part
0409	00354123		Dispenser tray
0410	00172394	00421488	fastening ring
0411	00265958		Hose-fill
0412	00066806	00603523	fastening ring
0413	00171263		Ball-sump
0414	00266059		Eco-hose-sump
0415	00168817	00424981	Pressure chamber
0416	00066613		Hose-pressure chamber
0417	00032582		Holder
0418	00188918	00427040	Regulator-water level
0419	00183810		Holder
0421	00473949		Outlet hose
0422	00092126		Holder
0423	00151409		Filter-fluff
0424	00172339		Filter-fluff
0425	00143525		Pump-drain
0426	00362255		Duct
0427	00362256		Duct
8000	00472560		Built-under kit

8401

00587684

Instruction manual