



Position ID	Spare part no.	Replacement	Description
0101	00266722	00481580	Power cord
0102	00171254	00623842	Capacitor-interference suppre.
0104	00172694		Cable harness
0105	00172696	00423704	Cable harness
0106	00183210	00423702	Cable harness
0107	00172695	00423701	Cable harness
0108	00173541	00188590	Sealing
0109	00266748	00267678	Tray handle-dispenser
0110	00172697		Coupling
0111	00172699		Knob-programme
8000	00472560		Built-under kit

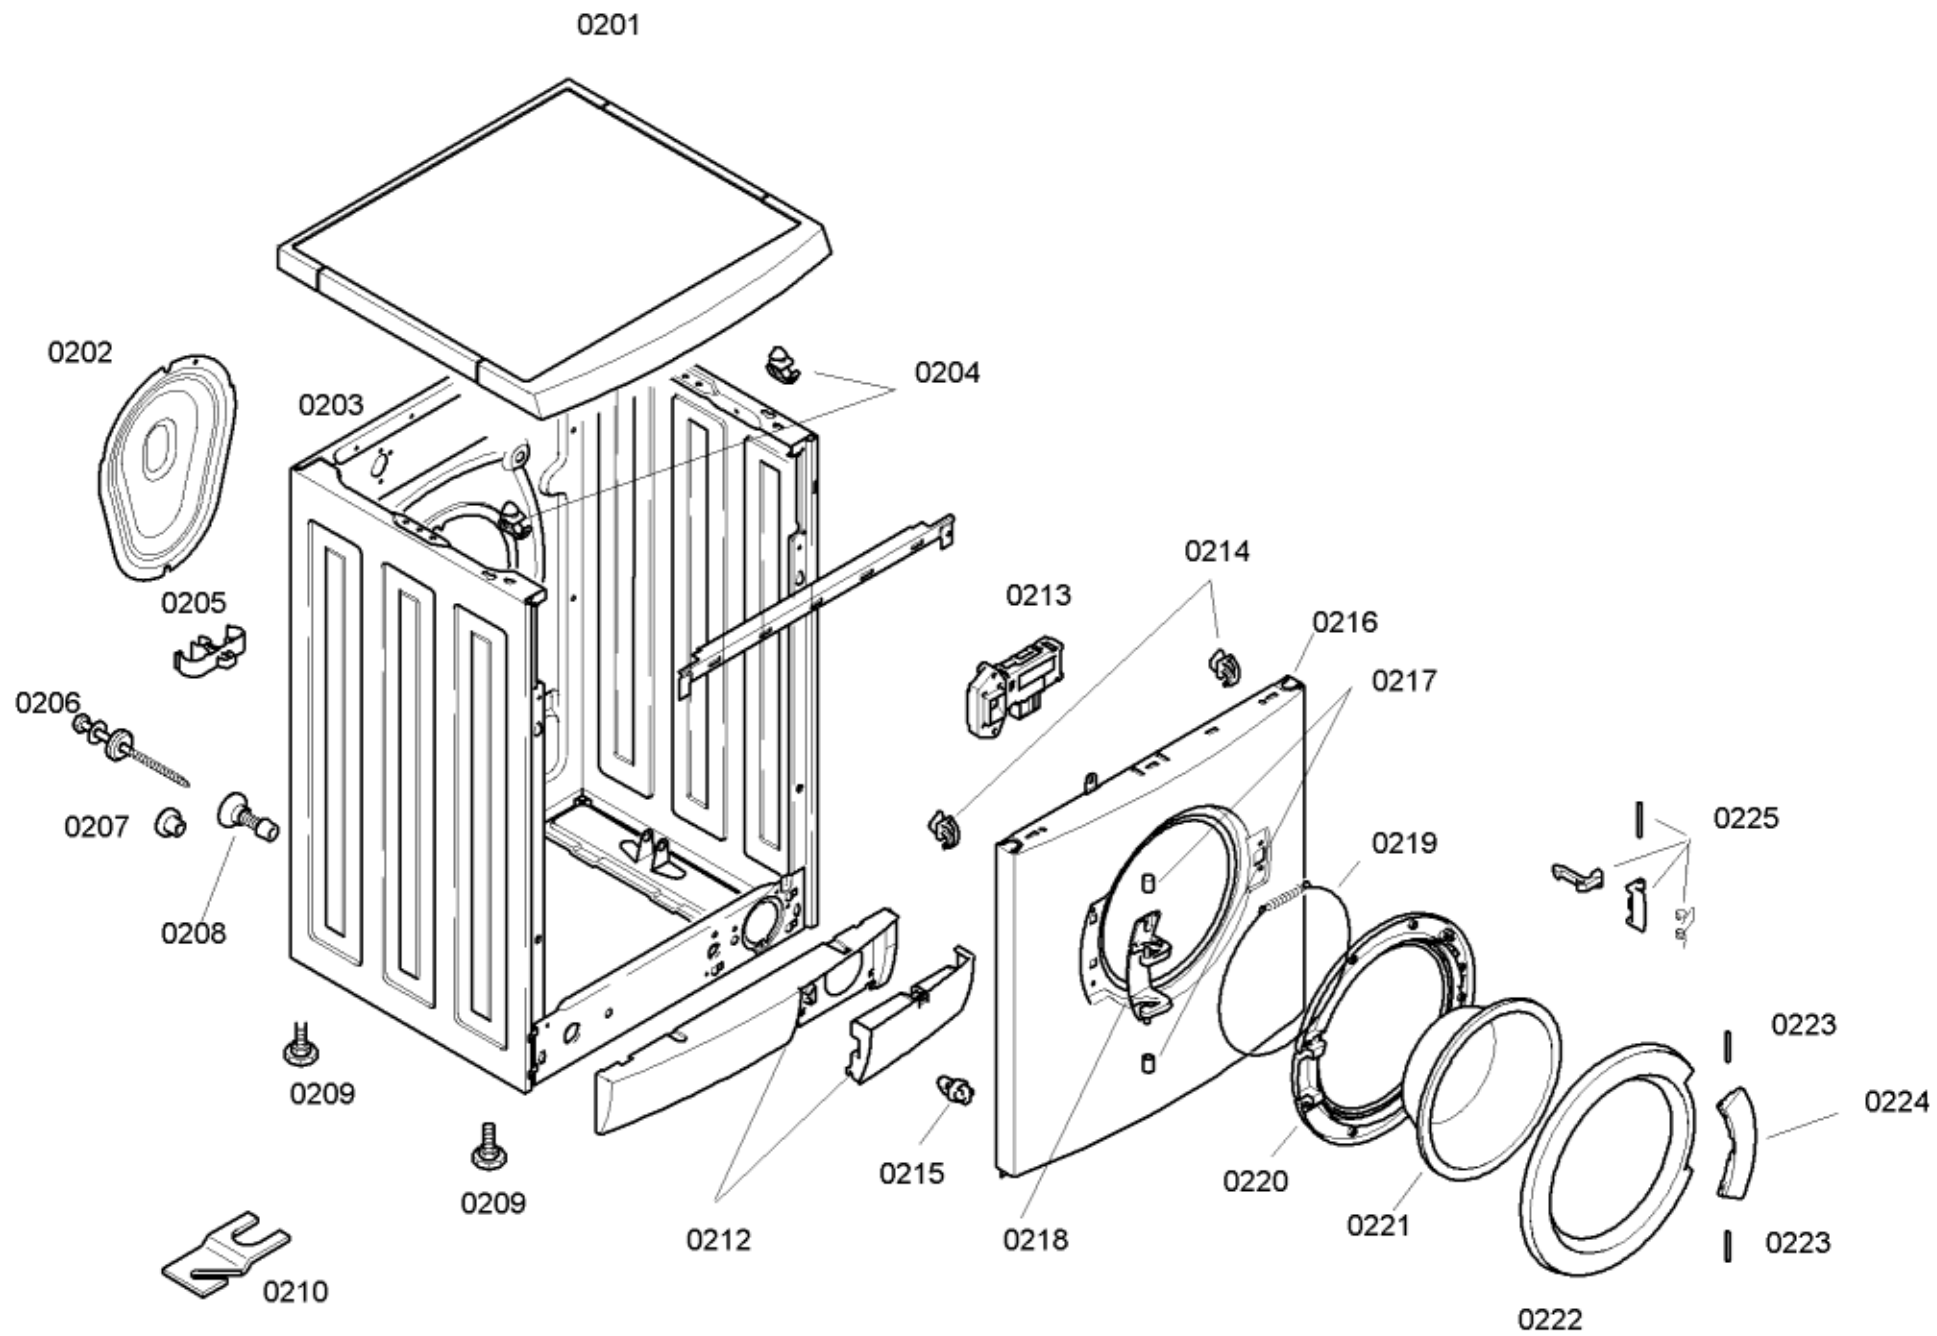

Position ID	Spare part no.	Replacement	Description
0201	00238449		Desk top
0202	00285435		Case-rear part
0203	00235129		Housing
0204	00167581		Holder
0205	00095209		Holder
0206	00168813		Transit bolt
0207	00165362		Cover
0208	00168814	00600388	Distance holder
0209	00067332	00621463	Foot
0210	00080451	00493529	Floor Securing Component
0212	00434552	00796389	Panel-base
0213	00423587	00603514	Electric lock
0214	00167587	00067083	Holder
0215	00066788		Holder
0216	00214719	00235567	Front panel
0217	00171264		Bushing
0218	00171269		Hinge-window
0219	00354126	00439671	fastening ring
0220	00432073		Ring
0221	00354128	11020392	Window
0222	00366232		Frame-window
0223	00171255		Axis
0224	00266751		Handle
0225	00173251	00634207	Latch
8000	00472560		Built-under kit

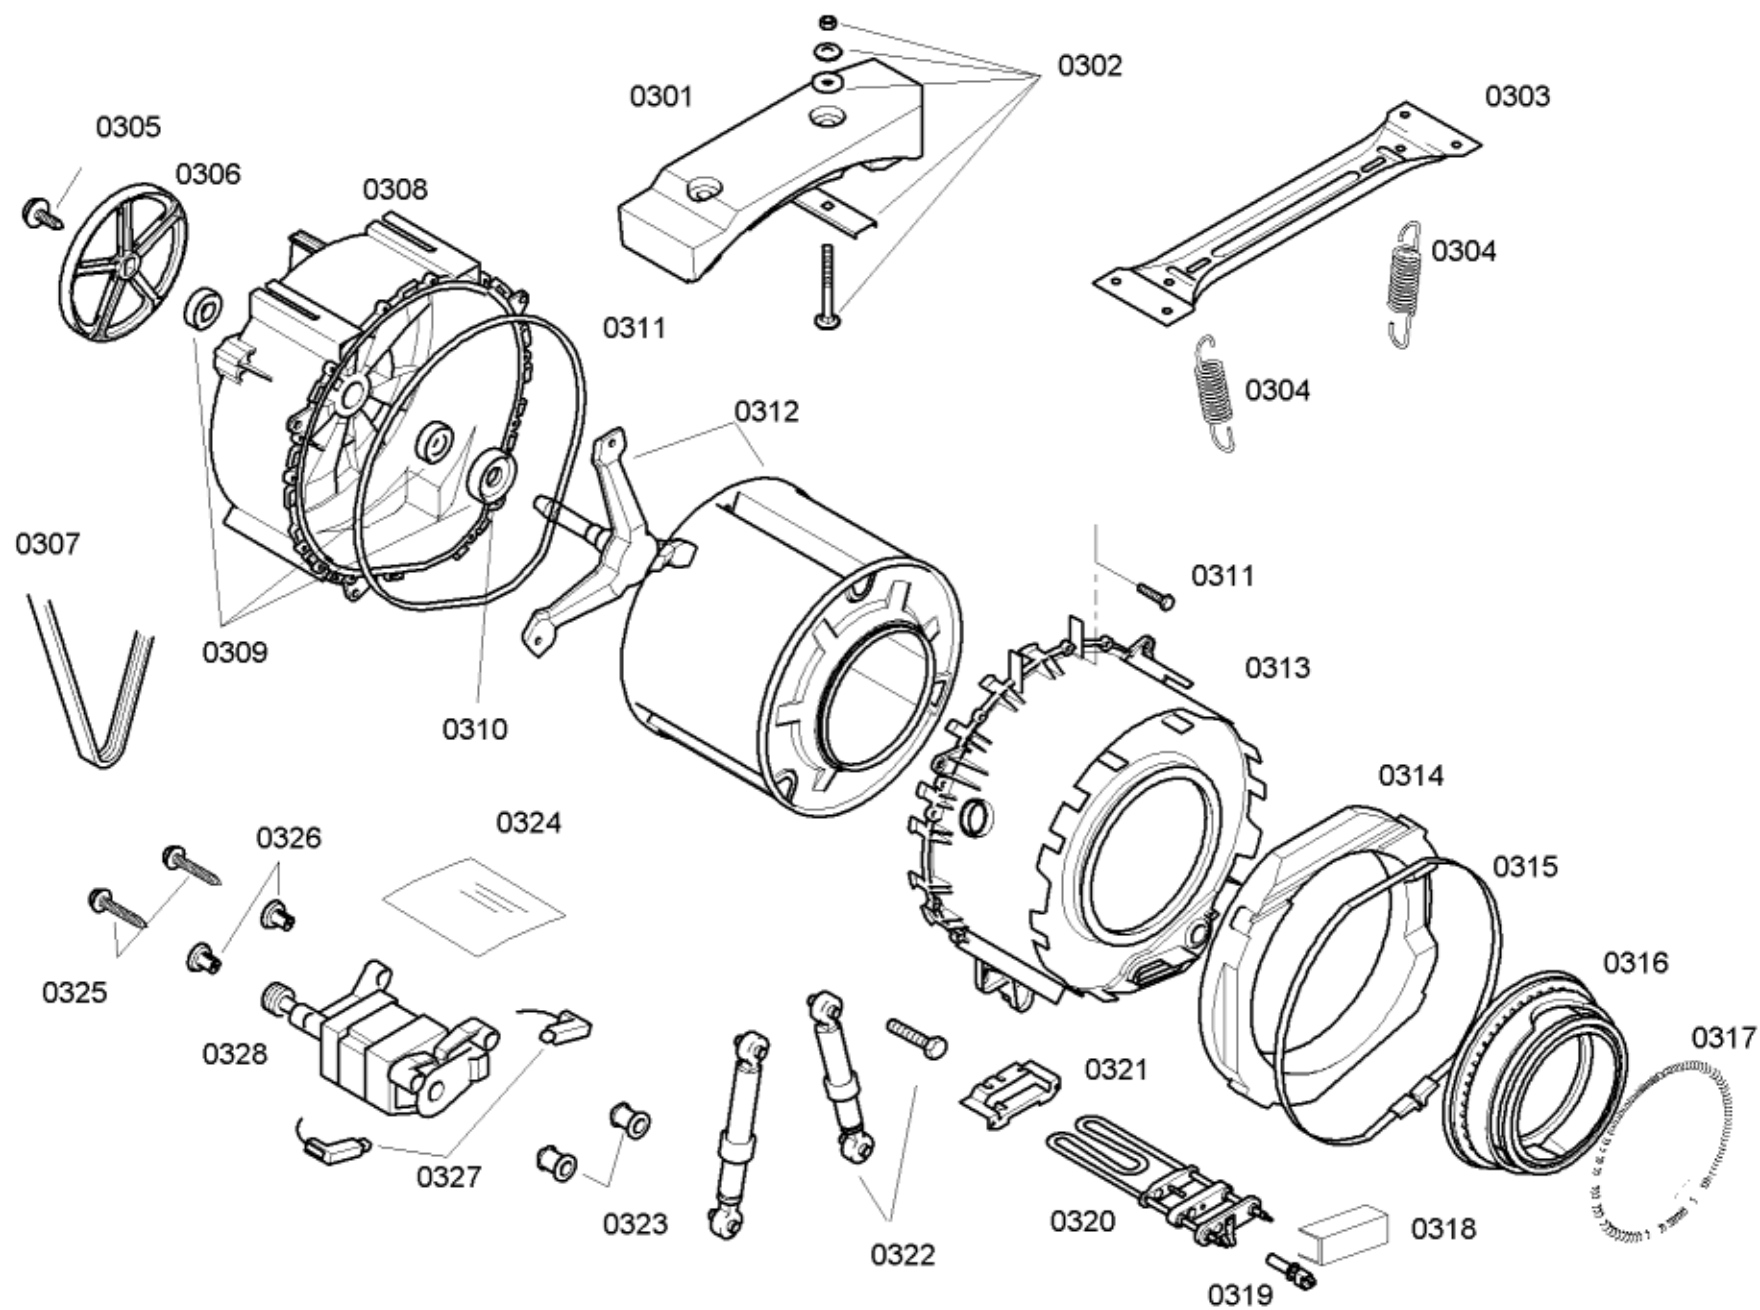


Position ID	Spare part no.	Replacement	Description
0301	00214720		Weight
0302	00265963		Fixing kit
0303	00289822		Support
0304	00069605		Spring
0305	00171270		Screw
0306	00354130	11002942	Pulley
0307	00354131	00678914	Belt-drive
0308	00235500		Tub at rear
0309	00172685		Bearing set
0310	00172692	00613083	Shaft seal
0311	00265964		Sealing
0312	00215117		Drum
0313	00235502	00241627	Tub
0315	00268663		Clamp
0316	00354135		Boot gasket
0317	00354134		fastening ring
0318	00172719		Cover
0319	00170961		Sensor-NTC
0320	00265961		Heating element
0321	00171263		Ball-sump
0322	00433761	00448032	Shock absorber
0323	00168798		Holder
0324	00266752		Cover
0325	00171271		Screw
0326	00171272		Fixture
0327	00154740		Carbon-brush
0328	00142369	00145563	Motor

8000

00472560

Built-under kit

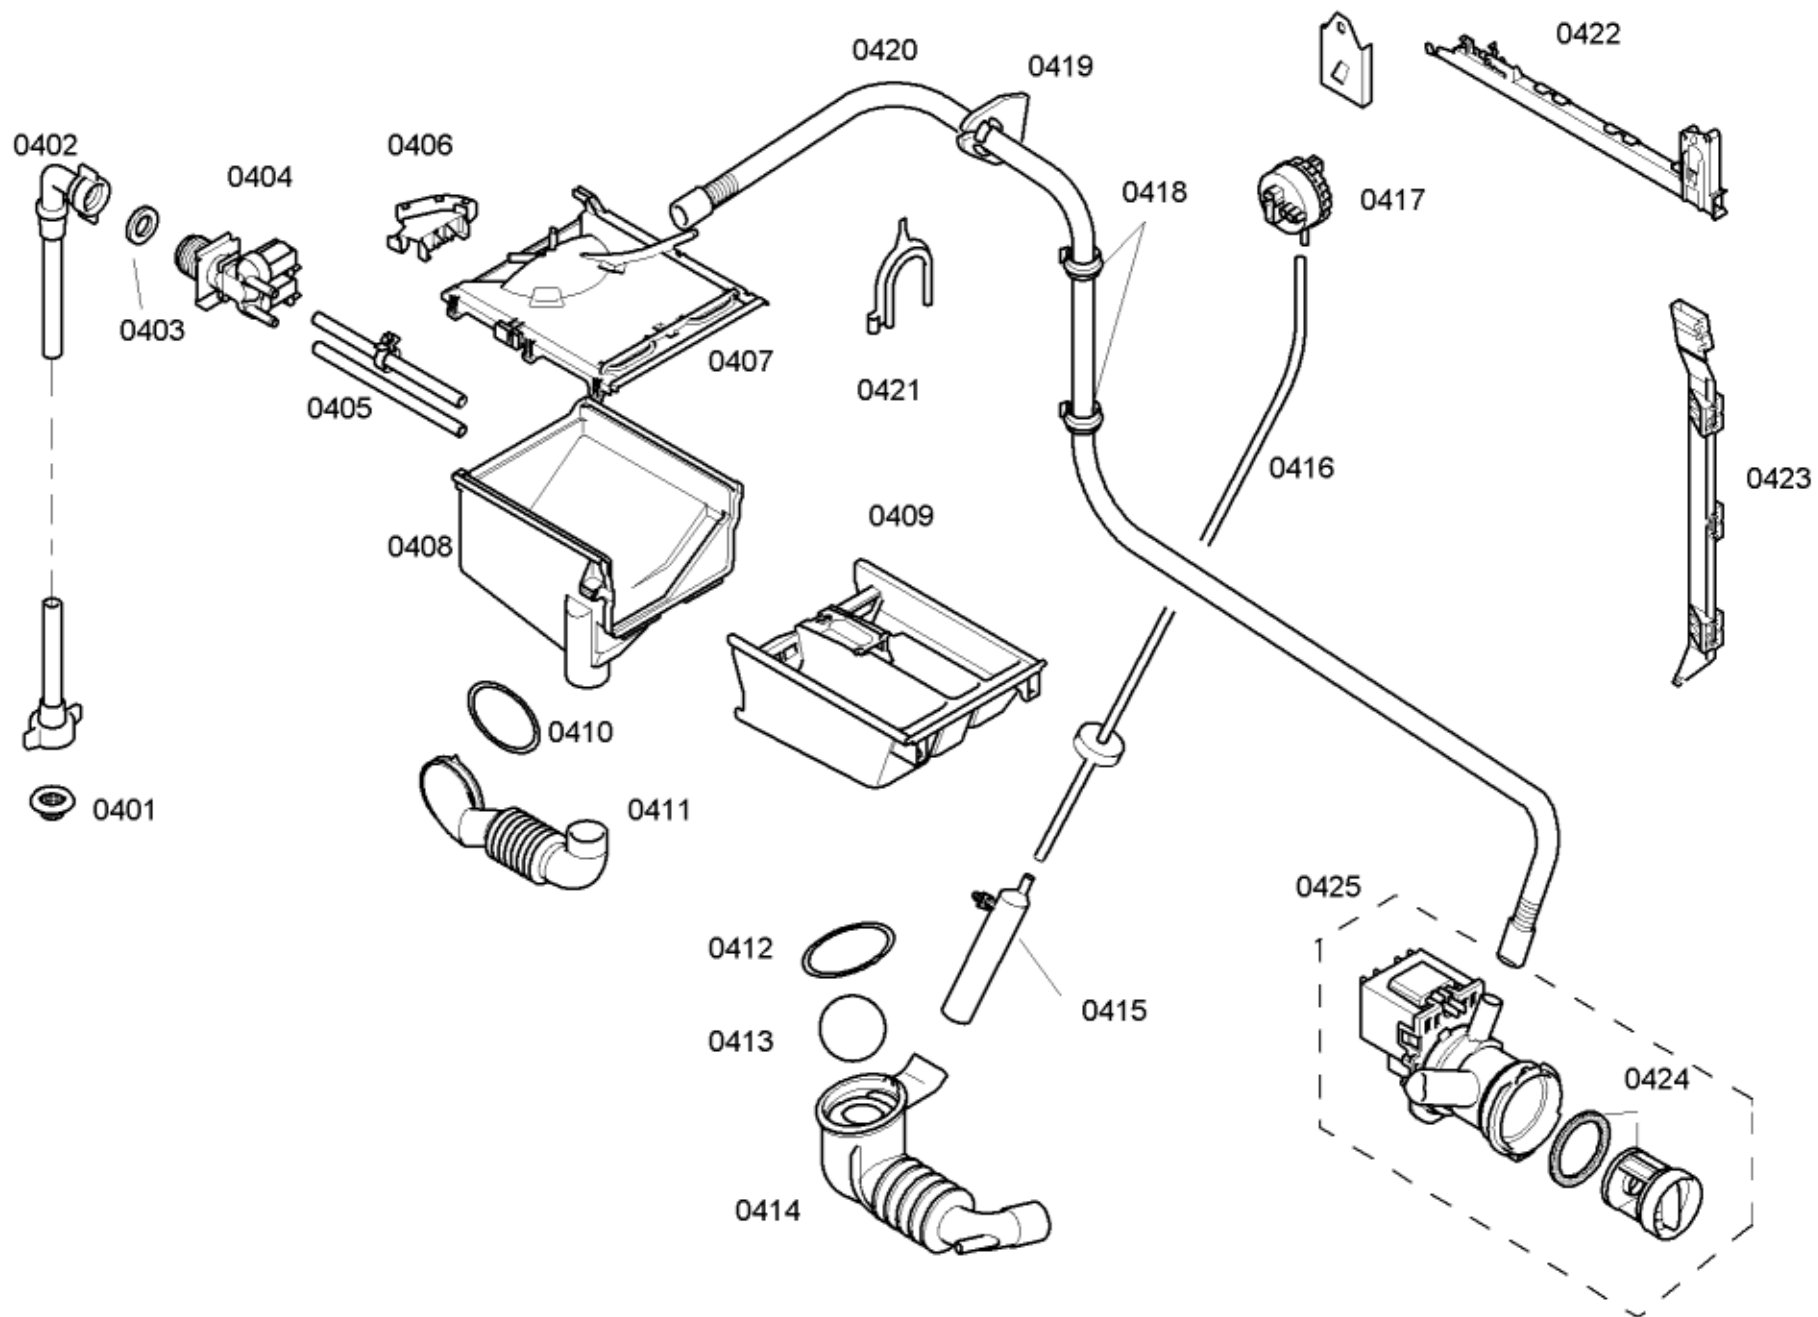

Position ID	Spare part no.	Replacement	Description
0401	00034887	00027780	Filter-water inlet
0402	00353924	00700836	Hose-inlet
0403	00066627		Sealing
0404	00171261	00428210	Valve-magnet
0405	00171262		Hose-valve/soap box
0406	00171267		Holder
0407	00265957		Dispenser tray-upper part
0408	00354122		Dispenser tray-lower part
0409	00354123		Dispenser tray
0410	00172394	00421488	fastening ring
0411	00265958		Hose-fill
0412	00172395	00603523	fastening ring
0413	00171263		Ball-sump
0414	00480443		Eco-hose-sump
0415	00168817	00424981	Pressure chamber
0416	00171265	00491919	Hose-pressure chamber
0417	00188918	00427040	Regulator-water level
0418	00068337		Holder
0419	00150871		Terminal
0420	00354124		Outlet hose
0421	00092126		Holder
0422	00362255		Duct
0423	00362256		Duct
0424	00151409		Filter-fluff
0425	00143995	00145787	Pump-drain
8000	00472560		Built-under kit